


AREA

INSTALLATION GUIDE

DISCLAIMER: THIS DOCUMENTATION SHOULD ONLY BE USED AS A GUIDE. ALL INSTALLATIONS SHOULD BE CARRIED OUT BY A PROFESSIONAL. AREA ARE NOT RESPONSIBLE FOR YOUR INSTALLATION.

INSTALLING AND REMOVING SCREWLESS RANGE


Installation of Screwless Range

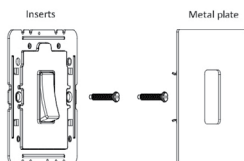

Steps

1. Screw inserts into backbox using screws provided.
2. Clip the metal plate into the insert.

Removal of Screwless Range

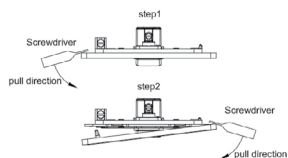

Steps

1. Insert a flat screw driver into the slot on the side. Pull towards you to release the plate.
2. Repeat Step 1 but on the opposite side.
3. You can now remove the plate.

WARNING

Do not use on freshly plastered or damp walls as this may cause tarnishing. All products must be earthed.


Environmental Protection

waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




WALL SOCKET- WIRING OPTIONS

13A 1 GANG
SWITCHED SOCKET

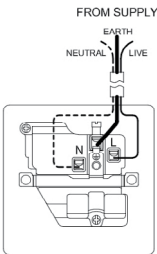


13A 2 GANG
SWITCHED SOCKET

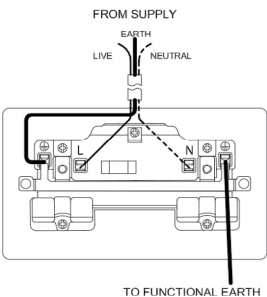

WALL SOCKET USB - WIRING OPTIONS


13A 1 GANG SOCKET
WITH USB OUTLET

(BACK BOX MIN.DEPTH 35MM)

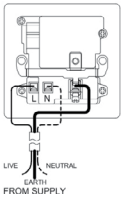


13A 2 GANG SOCKET
WITH USB OUTLET

(BACK BOX MIN.DEPTH 35MM)

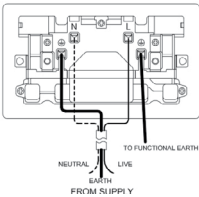


WALL SWITCH - WIRING OPTIONS

1 WAY SWITCH

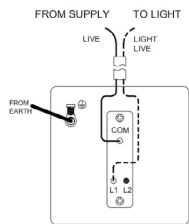


2 WAY SWITCH

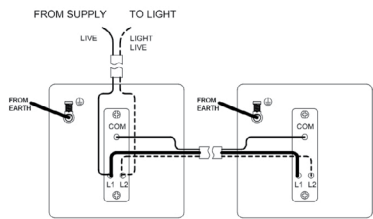

2-WAY SWITCH

2-WAY SWITCH

INTERMEDIATE SWITCH

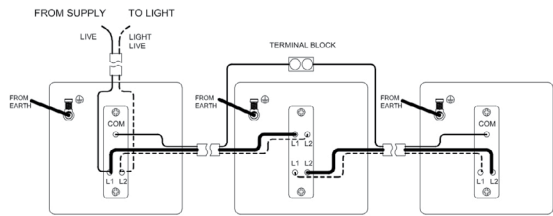

2-WAY SWITCH

INTERMEDIATE SWITCH

2-WAY SWITCH